

## USB & 3.5mm Jack Retention Interface for Jeep Renegade 2015> Vehicles



### INTRODUCTION/PRELIMINARY

This product is for Jeep Renegade 2015> vehicles. Included are all the parts required to retain the OEM USB and 3.5mm jack ports when upgrading to an aftermarket head unit. Refer to individual instruction in this manual to fit the part into your vehicle

### LIABILITY DISCLAIMER

*This instruction booklet is based on carefully documented data and research. Connects2 Ltd cannot be held responsible for discrepancies/inconsistencies that may occur due to the automobile manufacturing changes or options, or damage that may occur in the vehicle during the installation of components while using this booklet.*

If you have any further questions regarding this installation, visit [support.connects2.com](http://support.connects2.com)

© Connects2 Ltd. 2016

## INSTALLATION GUIDE

### STEP 1

OEM Dashboard. Some plastic parts will need to be removed and retained for use with the new interface



### STEP 2

Remove the plastic section shown in the image from the dashboard




### STEP 3

Use a screwdriver to remove the rear-most plastic section by applying pressure on the clips in the areas indicated in the image



### STEP 4


Open the clips and remove the original component board as shown in the image

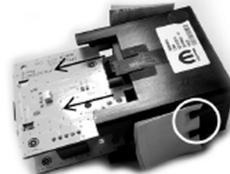

## INSTALLATION GUIDE

### STEP 5

Retain the circled piece from the original board and mount it to the supplied board in the same location

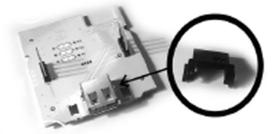

### STEP 6

Disconnect the harness from the supplied PCB. Insert the PCB into the plastic as shown in the image. Plug back in the previously disconnected harness.



### STEP 7

Insert the piece from Step 6 into the plastic surround. Plug in all connections on the radio side. Insert the USB/Jack replacement panel into the hole left by the OEM part to complete your installation

